

OPERATION AND MAINTENANCE INSTRUCTIONS

Press Double Valves



Series XSz
Size 20

Brochure N-267

HERION's Series XSz Double Valves use a dynamic monitoring system consisting of air logic with integral volume chambers and orifices.

In addition to the Double Valve a complete system may contain additional components such as a silencer or fault indicator. For additional information reference HERION brochure No. 1101.

TECHNICAL DATA:

Construction: Solenoid actuated, internally pilot operated poppet valve.

Fluid: Compressed air, filtered, lubricated or non-lubricated.

Temperature Range: 15° F to 140° F.

Operating Pressure: 30 to 120 psig.

Operating Frequency: 165 cycles per min.

Weight: 11lb.

CONSTRUCTION:

The XSz Double Valve has three sections. The top of the valve is the pilot valve assembly. The bottom half is divided into the main valve assembly and the valve base. The base has no moving parts and can be left on the machine when servicing the other sections.

The valve body is cast aluminum. Poppet pistons are constructed of Delrin 500. The seals are made of polyurethane. The solenoid is a pressure molded encapsulation.

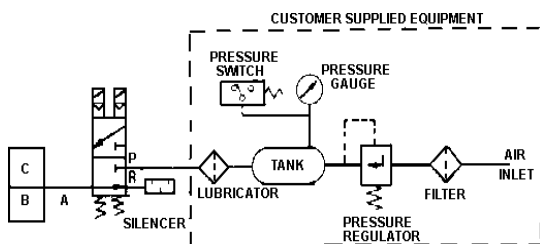


Fig. 1 Typical Installation

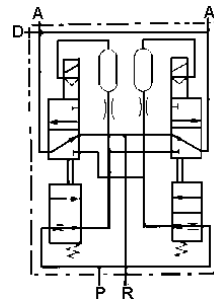


Fig. 2 Press Double Valve

INSTALLATION:

The preferred orientation of the Double Valve is with the poppets or spindles vertical. Distance between the Double Valve and the clutch or brake should be kept to a minimum. For safety reasons HERION recommends that no other components be installed between the Double Valve and the Brake or Clutch.

Care must be taken to avoid particles like metal chips, sealing compound or scale in the piping, which may cause valve failures. The size of pressure regulator, lubricator and filters must be consistent with the inlet port size. An accumulator tank is recommended between the pressure regulator and the Double Valve. The operating pressure must not drop below 30 psig and the use of a pressure switch is suggested. Refer to Fig. 1.

DO NOT restrict the exhaust port. Use a muffler or silencer which is resistant to clogging and has a flow capacity at least as great as the exhaust capacity of the Double Valve. Silencer contamination or clogging can increase back pressure and reduce flow. HERION expressly disclaims any responsibility for unsatisfactory performance caused by the use of the wrong type, size, or inadequately maintained silencers.

WIRING:

The correct power supply voltage and frequency is indicated on the solenoid labels. For proper operation of the dynamic, air-logic monitor; both solenoids (2) should be electrically connected in such a way they are energized simultaneously. It is the responsibility of the user, purchaser or installer to comply with OSHA control and redundancy requirements. Consult your local press controls supplier for additional help.

TESTING:

After installing or rebuilding a Double Valve, it is very important that it be tested for proper operation prior to being placed in service.

TEST CONDITIONS:

Fluid: Compressed Air

Test Pressure: 30 and 120 psig

Test Voltage: Per solenoid nameplate less 15%

It is recommended that a Variac be used to obtain the reduced voltage. Reducing the voltage by 15% for the test assures that the valve will operate properly if voltage fluctuations occur after the valve is placed in service.

TEST PROCEDURE:

CAUTION: The solenoid is powered through a three prong (2 power, 1 ground) connector. Check the solenoid nameplate for the proper voltage prior to making the electrical connection.

1. Plug Port "A" with a pipe plug or gauge. Make sure that the muffler or silencer is installed in Port "R".
2. Connect 30 psig air supply to Port "P".
3. Energize both solenoids simultaneously. Pressure should reach Port "A" without air flow through Port "R". De-energize both solenoids allowing air to exhaust through Port "R". Do this several times. No malfunction should occur. A malfunction is described as a continuous flow of air through Port "R".
4. Energize only the left hand solenoid. Unit will malfunction.

5. Energize only the right hand solenoid. Unit will malfunction.
6. Energize both solenoids then de-energize the left solenoid. Unit will malfunction.
7. Energize both solenoids then de-energize the right solenoid. Unit will malfunction.

Repeat steps 2 to 7 using 120 psig at Port "P".

SERVICE DATA:

The standard solenoid for the XSz-20 valve is **HERION** model No. 0801. The connector conforms to DIN 43650 Form A and the combination solenoid / connector meets classification NEMA 4. This **HERION** solenoid is rated at 100% duty cycle and complies with insulation class "F" (155° C).

POWER CONSUMPTION (0801 SOLENOID)

DC : 16 W

AC : 50 VA (Inrush) / 33 VA (Holding)

VALVE DATA (XSz-20)

Port Size : 1(P) = 3/4", 2 (A) = 3/4", 3(R) = 1"

C_v : 1(P) → 2(A) = 8.0

: 2(A) → 3(R) = 13.2 (Exhaust)

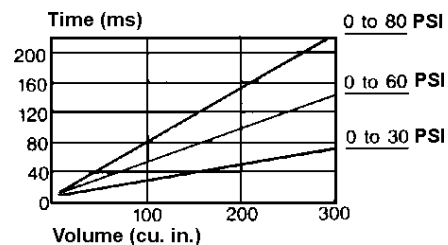


Fig. 3 Pressure Build-up time

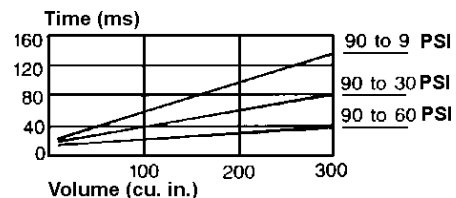


Fig. 4 Pressure Exhaust Time

PARTS LIST

1. Pilot Valve (2)
2. Lower Seal Assembly (2)
3. Safety Washer
4. Top Seal (2)
5. Seal Holder (2)
6. Sleeve (2)
7. O-Ring (1)
8. O-Ring (4)
9. O-Ring (2)
10. O-Ring (2)
11. O-Ring (2)
12. Lip Ring (2)
13. Gasket (1) (not shown)
14. Spring (2)
15. Lubricant (not shown)

16. Housing
17. Spring Flange
18. Solenoid
19. Connector
20. Pilot Valve Nut
21. Spring Guide
22. Spacer
23. Piston
24. Socket Head Cap Screws (metric)
25. Pilot Valve Housing
26. Socket Head Cap Screws (metric)
27. Socket Head Cap Screws (metric)

Note: Parts in **BOLD FACE PRINT** (items 1 - 15) comprise the **spare parts kit, part no. 8111281**. Quantities for all parts in the kit are shown in parenthesis.

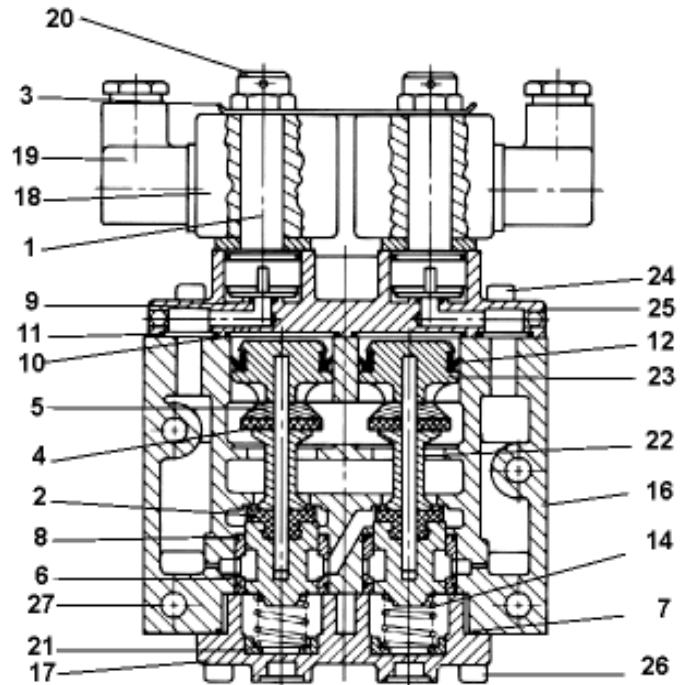


Fig. 5 Main Valve Section

WARNING:

HERION recommends that any reconditioning required on the Press Double Valve should be performed by **HERION USA, Inc.** or its authorized distributor. Call 800.8HERION for help. Customer repairs should only be performed by skilled, trained and qualified personnel following the operating and test instructions.

INSTALLATION OF SPARE PARTS:

CAUTION:

Before attempting any service work on the valve, disconnect all electric power and compressed air. Be careful to prevent any damage to the seals, O-rings, and sealing surfaces of the valve housing during assembly or disassembly. All moving parts, such as lip seals and pistons should be lubricated with **HERION** lubricant 0705091x02.

A. SEPARATE VALVE BODY FROM BASE:

[Numbers in brackets refer to cross section and parts list shown above]

1. Using a 6 mm hex wrench remove 4 cap screws (27) to separate the front half of the valve from the base section. The front half is the main valve housing (16). The back is the valve base. Always replace the gasket (13) once the two halves have been separated.

B. DISASSEMBLY OF PILOT VALVE SECTION:

1. Bend down the tabs on the safety washer (3) and remove bronze pilot nuts (20) and solenoids (18). **Note:** On older valves, each solenoid has a separate safety washer.
2. Remove 4 Phillips head screws (not shown) from both retaining plates under the solenoids, and remove the pilot valves (1).
3. Remove O-rings (9) from under the pilot valves.

C. DISASSEMBLY OF MAIN VALVE SECTION:

1. **Using a 5mm hex wrench**, remove 4 cap screws (26) and separate the spring flange (17) from the housing.
2. **The main valves “poppets”** are comprised of stacked assemblies and they will come apart. Through Port “R” pry up on upper seal (4). The lower seal assembly (2) is removed through the bottom of the valve housing. All other parts of the poppets are removed through the top.
3. **Remove the sleeves** (6) through the bottom of the valve housing. Be careful not to damage the valve body.
4. **Clean** the base and the valve housing using degreaser and a soft bristle brush. Dry all parts before reassembly.
5. **Examine** the main valve housing for wear at the valve bores and seating surfaces. Deep scratches or pitting requires valve replacement.
6. **Examine** the orifice holes on the back side of the valve housing. Assure that they are open using shop air, etc.

D. SILENCERS

Silencers should be removed and inspected for clogging, dirt, etc. Follow the manufacturer's instructions for disassembly and proper cleaning (Note: **HERION** Safety Silencers should not be disassembled but may be cleaned by dipping in solvent). If there is any concern with contamination or reduced flow, install a new silencer. See brochure 1081.

E. ASSEMBLY:

1. **Assemble** components in reverse order of disassembly. Replace all old components for which there were replacements in the spare parts kit. Replace the pilot valves (1). Do not reuse the old valves. Replace old safety washers with the newer style (3).
2. **Lightly** lubricate parts before assembly.
3. **Note** the larger end of the spacer (22). The large end goes toward the top of the valve.

F. **TEST:** Test the valve according to the test procedure outlined on page 2.

FACTORY SUPPORT, SERVICE OR TRAINING:

1. New or rebuilt valves available within 24 hours.
2. Call 800.8HERION (800.843.7466) for technical support or service.

HERION USA Inc. • 176 Thorn Hill Road • Warrendale • PA 15086
Phone: 724.776.5577 Fax: 724.776.0310
email:sales@herionusa.com